 

Lingo *PacificaTalk*

Ten Languages Talking Translator Instruction Manual

Over 200,000 words
and 23,000 useful phrases
Databank and Calculator
Metric Conversions
Currency Conversions
Local Time
World Time

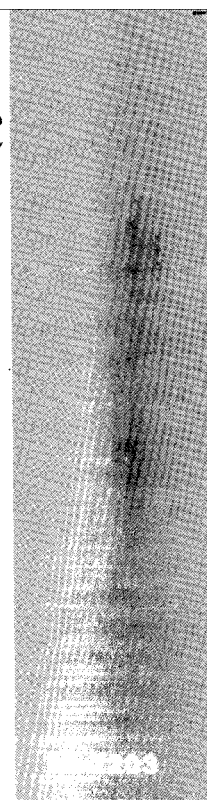

4. KEY TONE :

You can select to have tone or without tone when you press any keys on keyboard.

4.1 Press 3 in set up mode, display shows:



4.2 Press 1 to have tone On, you will find an "🔊" icon of the key tone lights on meanwhile there is a tone when you press any keys.

5. LCD CONTRAST:

There are 5 levels light or dark display which you can adjust with your choice.

5.1 Press 5 in sep up mode, the CONTRAST, display show:



5.2 Press "LEFT" (←) key to decrease darkness, or press "RIGHT" (→) key to increase darkness.

5.3 Press ENTER until you find an optimal display contrast.

6. DAILY ALARM:

6.1. Press 6 in the set up mode, displays shows:



6.2. Press 1 and Enter to switch Alarm on, display shows:



14.

6.3. Press "Up" (↑) or "Down" (↓) key to set up your time, e.g: 11:15. Move "RIGHT" (→) key to set minute, display shows:



6.4. Alarm comes on when time reach, press any key to stop your alarm.

7. SUMMER TIME:

If you are in Summer daylight saving time, you can select to switch ON the Summer time in your translator. When you switch ON the Summer time feature, the current time will automatically advance by one hour.

7.1. Press 7 in the set up mode, display shows:



7.2. Press 1 to select Summer Time ON.

7.3. Press 2 to select Summer Time OFF.

7.4. After you setup Summer Time ON, you can see an icon "☀️" on your local time: this icon shows adding a hour for Summer time.

8. OFF TIME:

The translator automatically switches off if no key is pressed for a certain period. You can select this time period from 1 minute to 15 minutes. In this mode, you can select to set your machine to have automatically switch off time of 1 minute to 15 minutes.

8.1. Press 8 in the set up mode, display shows:



8.2. The translator is set up to have automatic off of 4 minutes.

Press "left" (←) key to decrease minutes, press right key to increase minutes. You can see the minute to be set showing on right lower corner of the LCD.

8.3. Press "Enter" to confirm the setting.

15.

3. PASSWORD:
You can protect your TEL/MEMO information by inputting your personal password. Before you input the password, make sure you can remember the password, otherwise your data stored in TEL/MEMO memory will be locked until you reset your Translator.

3.1 Move the cursor to the PASSWORD and press Enter, or just press 2 to set up your password. Display shows:



3.2 Enter your password (not more than 6 letters):
 (e.g. A1B2C3), display shows:

 


3.3 Press "Enter", display shows:
 LOCK (Y/N)?



3.4 Press "Y" Yes to confirm, N for No to skip.

3.5 When you select "Y" to confirm the password, you have to input the password when you go into the TEL/MEMO and displays shows:



3.6 When you enter a correct password, it will release you to the TEL/MEMO mode. If you enter an incorrect password, it will flash "INVALID" and ask you enter Password again.

3.7 Release your password, enter to Password in Set Up mode.

3.8 Type your password, "A1B2C3", press "ENTER" display shows:

 


3.9 Press "Y" (YES) to confirm unlock, display flashed "UNLOCKED", the password is released and display returns to previous menu.

3.10 If you forget your password, you have to reset the translator. In this case, all your data in your TEL/MEMO memory will be erased.


NOTE: *If you wish to clear all data, or you find an abnormal screen which might be with interference by unexpected reasons, you can reset your machine. Before to perform the RESET operation, be sure it will erase all data stored in TEL/MEMO memory.*

To reset the machine :
 Switch the power on, use a thin, _____ pointed object to press the reset hole.

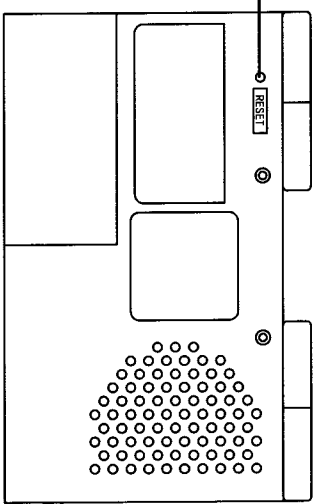

SET UP :

 Press **SETUP** to adjust the basic settings of the Translator. Various options are available in the setup menu. Press once of this button to have general settings. Press twice of this button to have language setting.




A. LANGUAGE DISPLAY

You can select any one of the 10 languages to be your display messages are displayed. Use left right up down (←→↕↕) keys or Page UP/Down (▲▼) key to select your language, and press **ENTER** to confirm.

e.g. **ENG** = English message, **DEU** = German message.

 Highlight the **ENG** and press **SET UP** again to select other general settings.

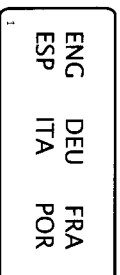


B. OTHER SETTINGS

There are also following settings:

1. TIME MODE

1.1 Press 4 to set up your **TIME MODE**.

 i.e. American format in Month/Date/Year, or British format in Date/Month/Year, 24-hours or 12-hours format. Display shows:



1.2. Use Left or Right (←→) key to select the change, e.g. press Right (→) key to change display to show **MM / DD** (Month/Date). Press Down key (↓) then Right (→) key to change display to show **12 - HR** (12 hours). Press **ENTER** to confirm this setting and return to **SET UP** menu.

10.

2. TIME SET

2.1 Press 1 to set up your **TIME**. The screen displays the local time. You can see "⊙" is on left bottom corner, means **LOCAL TIME**. There are 200 cities name inside the translator. You can select any one to be your local place.

2.2. Using "Up" (↑) or "Down" (↓) key to search the place you like to take. Or you can type in the first alphabet of the place name and then to search, e.g. press "N" to find the New York, display shows all the cities name which first alphabet is "N". Press the "Down" (↓) key until New York appears.

 
 
2.3. Press "Right" (→) or "Left" (←) key to set up the date and time you required, e.g. change the date to 03-22-2002 and time at 12:30. Move the cursor by pressing the "Right" (→) key on the month, press the "Up" key until the 03 appears.

 
2.4. Press "Right" (→) key to move cursor to date, year or time, and change your required time using same procedure as above.


2.5. Press "ENTER" to store the information already entered, display returns to previous menu.

2.6 To see Time and World Time, press "⊙" "Date/Time". Press once to see Local Time. Press twice to see World Time. Using "Up" or "Down" (↑↓) key to see your World Time, e.g. Type "L" and press "Down" key until London appears.


11.

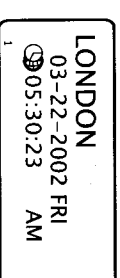






 
25.  :
- a) Korean characters.
 - b) Russian characters.
 - c) Japanese characters.

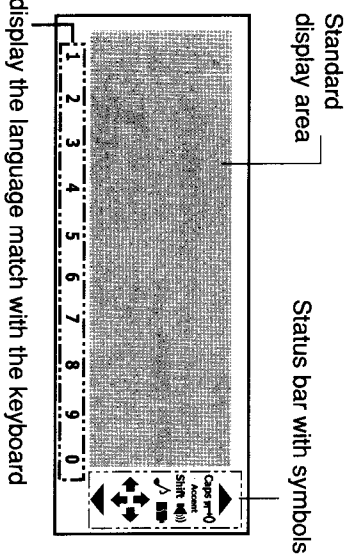 26.  :
- Characters for Calculations.

DISPLAY SYMBOLS



	Indicate that you can make a selection with these Left or Right keys to see further.
	Indicate that you can make a selection with these Up or Down keys to scroll further.
	Indicate that you can make a selection with these PAGE UP or PAGE DOWN key to scroll further.
Caps	Indicate that it is in Capital Alphabet.
	Indicate that it is in LOCK position and need password.
Shift	Indicate that it is in Shift status.
	Indicate that keyboard is with tone.
	Indicate that it is to be set up with ALARM.

8.

BACKLIGHT DISPLAY (AVAILABLE IN SOME MODELS)

- The built-in backlight will enable you to read the LCD in dark.
- Your translator comes with a backlight feature. To switch on the backlighting, do the following:
- Press and hold the <ON/OFF> button for approximately 1 to 2 seconds.
- The lighting switches on and remains on for as long as keys are pressed. Otherwise, the lighting is automatically switched off after a certain period of time to save battery power.
- To switch off the backlighting manually, press <ON/OFF> again and hold it for 1 to 2 seconds.
- The backlighting consumes battery power and therefore reduces the operating life of the batteries. We recommend that you use the backlighting sparingly.

OPERATION

Before starting, please read this instruction manual carefully and be sure follow the correct operating procedures. Keep this instruction manual for future reference.

SWITCH ON YOUR TRANSLATOR - To switch the Translator on, press <ON/OFF>. The device always starts in the mode that was active when it was last switched off. For example, if you were in calculator mode during the last use, you will be in calculator mode again when you switch the device back on.

The translator automatically switches off if no key is pressed for a certain period. You can select this time period from 1 minute to 15 minutes. Go to <SET UP> mode, number 8, (off time), from this mode, you can select to set your machine to have automatically switch off time of 1 minute to 15 minutes.

9.

1. ON/OFF



: a) Switch on & off. The translator will automatically switch off if you do not press any keys from 1 to 15 minutes.

(please set up the time from 1 to 15 minutes in Set Up Mode)

b) To get backlight, press and hold the ON/OFF button for approximately 1 to 2 seconds.

: Enter single word.

: Enter category to get 2300 sentences

: Press once to go to Calculator mode.

: Press twice to go to Databank mode.

: Press triply to go to Conversion mode.

: Press once to go to Local Time mode.

: Press twice to go to World Time mode.

: Press triply to go to Calendar.

: Press once to go to Set Up Mode.

: Press twice to go to select your language message.

: Press this key to amend data.

: When you are in European input, press this key to get the European accent.

: When you are in Chinese input, press this key to select the Chinese input method.

: There are three input methods in Chinese. When you are in Japanese input, press this key to select the Japanese input method.

: There are two input methods in Japanese.

: Speak key for language on top line of display. Press this key to hear the voice for the first language which shown on the top line of display.

: Speak key for language which shown on the top line of display.

6.

10. 2nd line Speak :



11. CAP

12. SHIFT

13. ESC

14. CLEAR / AC



15. DEL / CE

16. Backspace

17. SPACE

18. Left key

19. Up key

20. Down key

21. Right

22. Pg Up

23. Pg Dn

24. ENTER

Speak key for language on bottom line of display. Press this key to hear the voice for the second language which shown on the bottom line of display.

Press once to get Capital letter; press again to retrieve small.

Shift to get other letter apart from main letter.

Press this key to return to last screen.

a) To clear the whole input in the translator mode.

b) To erase data in databank mode.

c) As the 'AC' key in Calculator mode.

d) In phrases mode, press this key to clear the screen and input your word to search a right sentence.

a) Delete, to delete the letter with cursor.

b) As the "CE" key in calculator mode.

To clear the last input.

To provide an interval and world time mode.

To move the cursor leftward.

To move the cursor upward.

To move the cursor downward; or to see whole screen.

To move the cursor rightward; or to see more words from database.

Page UP key, to move screen to the last page.

Page Down key, to move screen to the next page.

a) Press this key to have translation in Translator mode.

b) Press this key to store data into memory in databank mode.

c) Press this key to confirm the setting in set up mode.

7.


9. 1st line speak




Replacing the databank memory backup battery:
 Before replacing the memory backup battery, Do not removed the 2 pcs AAA batteries from the Translator while memory backup battery is removed. With this way the memory in your databank will not be lost during the battery replacement. Be sure to replace the memory backup battery at least once a year.

1. Turn off the machine.
2. Unscrew the battery cover and replace it with a new one. Wipe the surface of the battery with a soft, dry cloth. Make sure that the positive(+) side of the battery are facing up.
3. Replace the battery compartment cover and fasten it with screw.

OVERVIEW THE TRANSLATOR

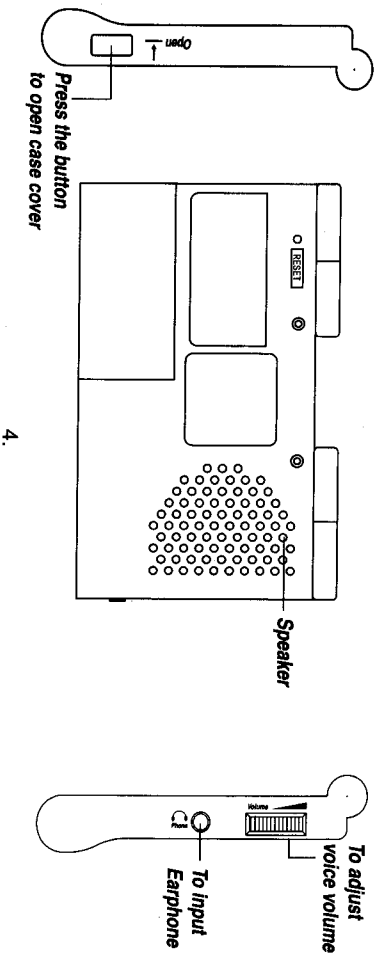

NAME OF KEYS

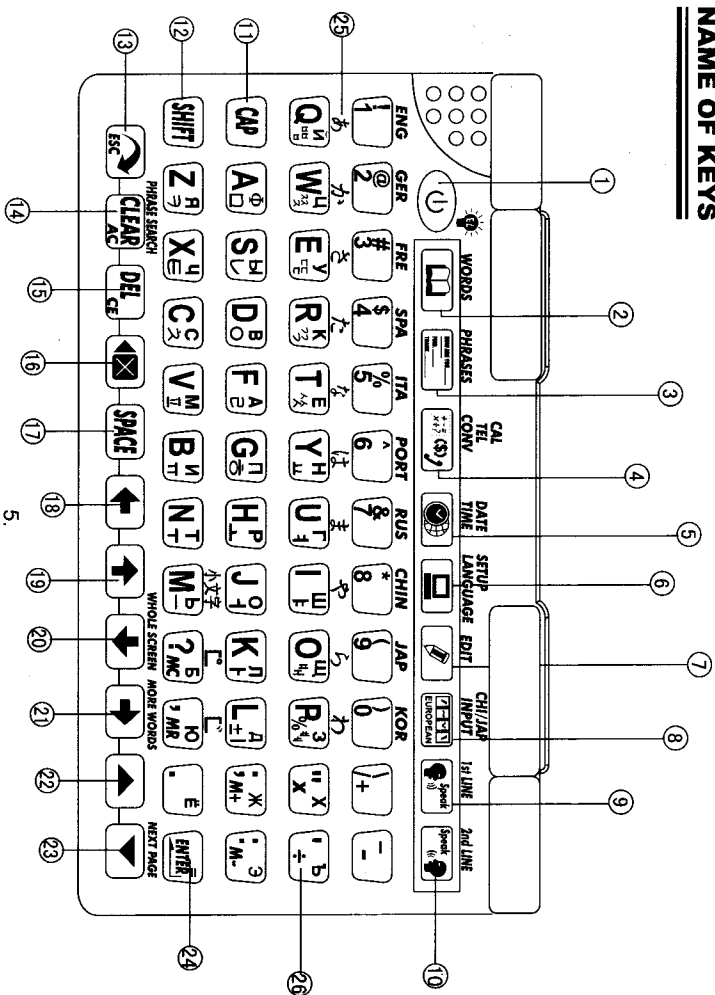 

6. **LOCAL TIME CLOCK** specifies your local date and time. **ALARMS** you when you preset your alarm time. Alternative American or English date format, 12-hour or 24-hour format and summer daylight saving time.
7. **WORLD TIME** shows the date and time of any one of 200 major cities in the world.
8. **CURRENCY CONVERSION** functions as a currency converter for 8 denominations of your choices.
9. **EURO Converter.**
10. **METRIC CONVERSION** converts automatically 8 different types of measurement.
11. **LIGHT/DARK DISPLAY** allows you a choice of 5 levels either light display or dark display.
12. **PERSONAL PASSWORD** allows you to lock your databank memory.
13. **Read by 4 LINES x 22 CHARACTER DOT MATRIX DISPLAY.**
14. **AUTOMATIC POWER OFF** conserves battery power allows you a choice by turning off the translator from 1 to 15 minutes.

BATTERY FITTING

Your translator is powered by two AAA batteries in the main power supply, and one CR2032 lithium battery in the databank memory. When the power lever of the batteries is low, the sound becomes weak and hoarse, the display is dim. If happens, replace 2xAAA alkaline battery immediately. The actual service life depends on the batteries you use, we recommend:

2.


- Keep the 2 pcs AAA batteries always in the machines otherwise the backup battery for databank will consume very soon.
- Replace the 2 pcs AAA batteries supplied with the unit not longer than 3 months of purchasing.
- Be sure that the positive and negative poles of each battery are facing in the proper direction.
- Never mix batteries of different types.
- Never mix old batteries and new ones.
- Never leave dead batteries in the battery compartment.

Replacing the main battery:

Before replacing the main battery, Do not remove the memory backup battery from the Translator while main batteries are removed.

- a) Turn off the machine.
- b) Slide off the battery door according the direction of the arrow indicated. The battery door is linkage with translator case.
- c) Remove the old batteries and replace 2 PCS AAA batteries (1.5 V, SUM-4, R3) in the correct polarity corresponding to the symbol indicated inside the battery compartment.
- d) Make sure that the batteries make a good contact with the metal plates.
- e) Cover the battery door.

3.

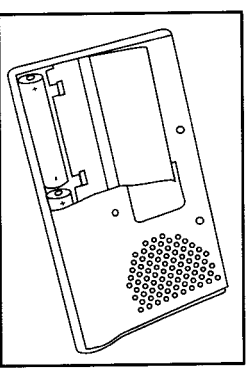

OPERATIONAL NOTES

Thank you for your purchase of our Translator. To insure trouble-free operation of your Translator, we recommend the following:

1. The Translator should be kept in area free from extreme temperature changes, moisture and dust.
2. This equipment is precision-built. Do not subject the translator to strong shock by striking or dropping it.
3. A soft, dry cloth should be used to clean the translator. Do not use solvents or a wet cloth.
4. Never disassemble or attempt to repair the translator and its accessories. Keep this manual for further.

FEATURES

1. The TRANSLATOR translates 10 languages containing 200,000 individual words and 23,000 sentences, average each language contains 20,000 words and 2300 sentences.
2. HUMAN VOICE inbuilt, instant speech of 10 languages and whole data.
3. Operational menu with 10 languages, you can select to use your mother language to be the operational menu.
4. The built-in 32K DATABANK stores and retrieves name, telephone numbers and memos.
5. 12 digits CALCULATOR can do memory and percent calculations as well as standard arithmetic operations.

USING THE TRANSLATOR

The translator contains about 20,000 words plus 2,300 phrases at each language. It help you to translate 10 languages instantly.



Words translation -

 
1. Press 'Words' key, display 'INPUT ENG:'



2. If you like to input other language, just press the number key, e.g. press 2 to input German, press 4 to input Spanish.



3. Press 1 return to 'Input ENG', type in your word e.g. CAR, press 'ENTER' display flashes 'Found: 19' and shows the translation of German 'auto'. It tells you there are 19 words related to 'CAR'.




16.

4. Press Right arrow key (➡) to see other 18 words related to CAR.



 5. Press 8 to get Chinese translation, 9 to get Japanese translation and so on.

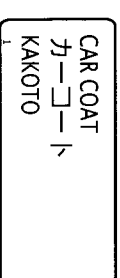

6. If the message is too long, press "Down" (⬇) arrow key to see the whole screen.

7. Press Page Down (⬇) key to see next word.

8. To enter a new word, just type or press 'ENTER' to clear display and type.

9. If you like to input other language, press 'Words' key and select to input other language again.

10. WORD FINDING - If the word(s) you entered is not in the database, the display will show the nearest word(s) instantly.

11. FOR THE EUROPEAN LANGUAES HAVE THEIR ALPHABET WITH ACCENT -

Simply press the original key and then European Accent key (🇪🇺), the display will show different alphabets and let you to select.

NOTE : The Accent Alphabet can be formed just in their own language mode. If you press the "European" when it is not the one of alphabet in the entry language, the display has no response.

E.g. in the entry language of French,

Type in A, display show:



17.

USING DATE/TIME/WORLD TIME: -



DATE/TIME

1. Press once of 'DATE/TIME' to have Local Time display, the icon "🌐" on left bottom corner means Local time.
2. Press twice of 'DATE/TIME' to have World Time display, the icon "🌐" on left bottom corner means World time.
3. Press 3 times of 'DATE/TIME' to have Calendar display.
 - a. Press twice of "DATE/TIME" to enter to World Time mode (200 cities name are displayed with English only). Display shows the place name which you edit at last time. e.g.
 - b. Search your required city by pressing the "UP" and "Down" (↕) key or type the first alphabet of the city name to get the place. E.g. Type the "H" to search Hamburg, display shows:
 - e.g. Press Down key to search the next to Hamburg, display shows:

LONDON
03 - 22 - 2002 FRI
🌐 07:44:48 AM

HAIFA
03 - 22 - 2002 FRI
🌐 09:45:41 AM

HAMBURG
03 - 22 - 2002 FRI
🌐 08:46:19 AM

32.

- c. Press 'DATE/TIME' to return to Local Time screen.

NEW YORK
03 - 22 - 2002 FRI
🌐 03:47:18 AM

4. To see the Calendar, use 'PAGE DOWN' (⏏) key to see next month, 'PAGE UP' (⏏) key to see last month. Press 'up' 'down' 'left' 'right' (↕) arrow keys to move the cursor to your required date.

31	1	2
3	4	5
6	7	8
9	10	11
12	13	14
15	16	17
18	19	20
21	22	23
24	25	26
27	28	29
30		

FOLLOW THE CORRECT OPERATING PROCEDURES, WE SINCERELY HOPE THAT YOU WOULD ENJOY THE INTEREST OF THE TRANSLATOR.

33.



1.2 Press "EDIT" (), the exchange rate is flashing:

```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
>USD 0.
EUR 0.
```

1.3 Change the exchange rate by type in a new rate, e.g. US Dollar one approximately equals to 0.9920 EUR.

1.4 Press "Edit" or "Enter" to confirm the rate.


 
```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
>USD 0.
EUR 0.
```

1.5 To change a currency name, e.g. change USD to CHF. Press EDIT to make the exchange rate flashing, and then press DOWN key () to move the flashing to the currency USD, press DOWN key () once more to move to EUR.

```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
>USD 0.
EUR 0.
```

1.6 Type in a new currency CHF to instead of EUR.

1.7 Press "EDIT" or "ENTER" to confirm the rate.

1.8 The Translator programs the following 8 currencies, you can make your own denomination according to above procedure. Use Left & Right ( ) key to move to view other currencies.

- 1 = USD > EUR (Euro)
- 2 = USD > GBP (Great British Pound)
- 3 = USD > RMB (Chinese Ren Min Bi)
- 4 = USD > JPY (Japanese Yen)
- 5 = USD > KRW (Korean Won)
- 6 = USD > TAB (Thai Baht)
- 7 = USD > CAD (Canadian Dollar)
- 8 = USD > AUD (Australian Dollar)

30.


 

2. CONVERTING CURRENCY

2.1 Press "CONV" and 2 to select "CURRENCY". display shows the first currency US Dollar to EURO.

```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
>USD 0.
EUR 0.
```

2.2 Type in the amount, e.g. USD 1,000 display shows:

```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
>USD 1000.
EUR 992.
```

2.3 To make 2 currencies inverse, press Up or Down ( ) key. E.g. To find EUR to what amount of US Dollars. Press Down () key, the arrow will go down to EUR.

```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
USD 0.
>EUR 0.
```

2.4 Type in 1000, display shows:
(i.e. EUR1000=USD 1008.064516129)





```
1 2 3 4 5 6 7 8
RATE=[ 0.992]
USD 1008.064516129
>EUR 1000.
```

2.5 To clear display for next calculation, press CE or AC.

USING THE EURO CONVERSION

1. Press "CONV" and 3 to select "Euro Converter". display shows:

```
1 2 3 4 5 6 7 8 9 A B
RATE=[ 40.3399]
>EUR 0.
BEF 0.
```

2. The built-in rates are those adopted by the Council of the European Union for the 11 participating countries. Press Right or Left Key ( ) to see the list and find the desired currency. Type in the amount to convert. To reverse the direction of the conversion, press Up or Down key ( ).

31.

4.8 At this stage, when you press 'CLEAR', display flashes to tell there is empty record:



4.9 When you press 'Page Down' key () to view data, display flashes to tell:

 


USING THE METRIC CONVERSION


The Translator can convert one type of measurement to another. The following 8 related pairs are built-in the unit and they can be inverse: °C(Celsius) to °F (Fahrenheit), M (Metre) to F (Feet), CM (Centimetre) to IN (Inch), L(Litre) to GAL(US Gallon), L(Litre) to BG (British Gallon), KB (Kilogram) to LB (Pound),G (Gram) to OZ (Ounce) and A (Are) to AC (Acre).

1. Press CONV (Conversion) key to go to Conversion mode. Press once of this function key is the 'CALCULATOR' mode, press twice is the 'TELMEMO' mode, press three times is the CONV (Conversion) mode. Displays shows:
2. Press 1 or Enter to go the Metric conversion mode. Display shows °C-°F and the formula for Celsius to Fahrenheit.
3. Enter the amount, e.g. 25 °C, press 25, display shows, from Celsius to Fahrenheit, i.e. 25 °C = 77 °F.

28.

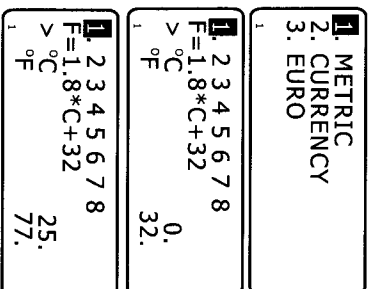

 
4. To convert from Fahrenheit to Celsius, press "Down" () key to move to °F, display shows:



5. Enter the amount, e.g. 100°F, type 100, display shows:

(i.e. 100°F = 37.77777777° C)

 6. Press "Right" key () to see other conversions, and "Left" key () to return.



7. The other types of measurement conversion are with same format as above.

8. Press ESC () to return to select conversion screen.

USING THE CURRENCY CONVERSION

 
The Translator can convert between 8 user-programmed currencies and your own denomination.

1. SETTING THE CURRENCY AND EXCHANGE RATES

1. 1 Press CONV (Conversion) key to go to Conversion mode, and then 2 to select CURRENCY conversion, display shows:

1 = CURRENCY ONE RATE = EXCHANGE RATE
USD = US Dollars EUR = EURO Dollars

29.

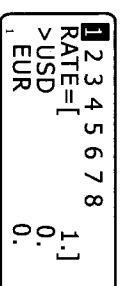

3.4 Move the cursor by using the "RIGHT" or "LEFT" (←→) key, type in a new letter, e.g. move the cursor to "O" and type in A, press "DEL" to delete the 'O'. Then, press "ENTER" to store the edited to name. Display shows:

```
1
SAVE
(Y/N) ?
```

3.5 Press 'Y' (Yes) to confirm, display change to ask for edit the telephone or address or memo, display shows:

```
1 01 234 5678912
```

3.6 Press the 'down' key (↓) to move cursor to the second line, go to 'O' and replace it by 'E', display shows:

```
1 01 234 5678912
NEW YORK CITY
```

3.7 Press 'ENTER', display shows:

```
1
SAVE
(Y/N) ?
```

3.8 Press 'Y' to confirm the enter, display returns to show full page:

```
1 BILL GATE
1 01 234 5678912
NEW YORK CITY
```

26.

4. DELETE THE DATA

4.1 Press "TEL", display show:

```
1 *ENTER NAME*
```

4.2 To delete a data, press "PAGE DOWN" key (⏴) to search the required name, e.g. display shows:

```
1 BILL GATE
1 01 234 5678912
NEW YORK CITY
```

4.3 Press "DEL" (Delete) and display shows:

```
1 DELETE
(Y/N) ?
```

4.4 Answer by pressing either 'Y' for YES or 'N' for NO, after which the Translator will return to the previous mode.

4.5 To delete all the data inside the databank, when the display shows:

```
1 *ENTER NAME*
```

4.6 Press "CLEAR", display shows:

```
1 DEL DATABANK
(Y/N) ?
```

4.7 Press 'Y' for Yes to delete all data inside, or press N for No. e.g. 'Y', display returns to the TEL mode.

27.

1. INPUT YOUR DATA

1.1 Press function key of "TEL". Press once of this function key is the "CALCULATOR" mode, press once again, you can go to "TEL" mode, displays shows:

1.2 Type in the name, e.g: BILL GOTE, display shows:

1.3 Press ENTER, display flash: * PHONE/MEMO *

1.4 Type in the number or address or memo, e.g.

1.5 Press ENTER to store the information.

1
ENTER NAME

1
BILL GOTE

1
PHONE/MEMO

1
1 01 234 5678912
NOW YORK CITY

2. RETRIEVE YOUR DATA

2.1 Press "TEL" to enter to the "TEL" mode. Display shows:

2.2 Press the "page Down" (▼) key to scroll data according to the alphabetical order of the name stored.

2.3 For quick search,

- a. Press TEL/MEMO
- b. Press " Page Down" (▼) key
- c. Type in the first letter of the name or full name which you want to retrieve.

3. EDIT YOUR DATA

3.1 Press "TEL", display shows:

3.2 Press "PAGE DOWN" (▼) key to search the name, e.g:

3.3 Press "EDIT", the display shows the name and a cursor on the first letter flashing.

1
ENTER NAME

1
BILL GOTE
1 01 234 5678912

 
1
ENTER NAME

1
BILL GOTE
1 01 234 5678912
NOW YORK CITY

1
BILL GOTE

TO HEAR VOICE

The Lingo Translator speaks 10 languages, English, German, Chinese, Japanese, Korean, Russian French, Spanish, Italian and Portuguese.

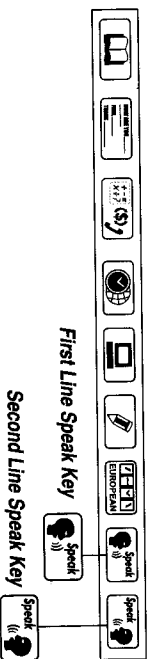


BOOKSHOP
BUCHHANDLUNG

1. Press the "1st LINE" speak key to hear the voice for the language on the top line of display and the "2nd LINE" speak key for the language on the bottom line. E.g. Input ENG: 'BOOKSHOP', press ENTER to get German translation, display shows:
Press the "1st LINE" speak key, you can hear the English voice "BOOKSHOP".
Press the "2nd LINE" speak key, you can hear the German voice "BUCHHANDLUNG".
It is with the same procedure to hear the phrases. Press the "1st LINE" speak key to hear the ENTRY LANGUAGE, the "2nd LINE" speak key to hear the LANGUAGE OF TRANSLATION.
2. The voice volume can be adjusted to a high level that is clear enough in outdoor environment.
3. However, a medium voice level is recommended for general learners to use the translator in indoor environment while the best effect can be obtained by using an earphone (optional accessory).

22.

USING THE CALCULATOR

 You can use the Translator to do standard arithmetic calculations, memory calculations and percent calculations. It calculates up to 12 digits.

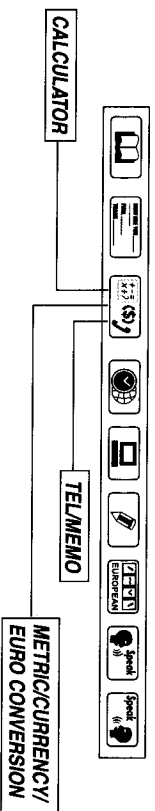

CALCULATOR
M=[
0.]
0.

1. Press "CAL" (calculator) to go into the calculator mode, display shows:
2. Standard calculation: +, -, X, ÷.
3. Memory calculation:
(M+) to total a calculation and add the total a memory.
(M-) to total a calculation and subtract the total from the value in memory.
(MR) to recall or display the value in memory.
(MC) to clear the memory.
4. Press "CE" or "AC" to clear display and calculation.

 
USING THE TEL/MEMO

The translator databank allows not only English input but also all the 10 languages. If you need to input the other languages, please select your language message to be the entry language in SETUP mode. E.g. If you need to input a Japanese name, you need to set up to Japanese Message.

23.

1. Press 'Phrases' key, displays main category 'COMMUNICATION', 'ACCOMMODATION'.
2. Press "Page Up/Down key" (▲▼) to search your category, or simply type in the first alphabet of the category, e.g. 'B', it goes to 'BUSINESS CONVERSATION'.
3. ENTER to 'BUSINESS CONVERSATION', you will find there are 6 sub-categories.
4. Use "Up/Down" key (↕) to go to your category, e.g. SHIPMENT DOCUMENTS, Press ENTER.
5. You can see on display the first phrase of 'AIR WAYBILL' and its translation; press "Page Down" (▼) key to see next phrase 'BILL OF LADING'.


20.

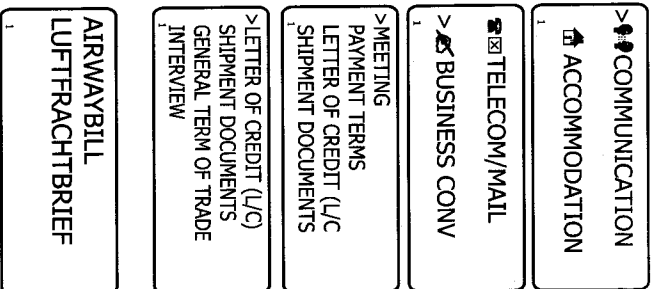

Quick search Phrases -


1. Press Phrases key, display main category 'COMMUNICATION', 'ACCOMMODATION'.
2. Press PHRASE SEARCH (CLEAR) key to clear screen, type in the word you want to search in the Phrases, e.g. 'food', press "ENTER", displays shows searching symbol, and found a phrase, display shows : 'Could you recommend some good food stalls which serve special local food?'. Press 8 o get Chinese translation, 9 to get Japanese translation, Press 'ESC' to return to the sub-category 'LOOKING FOR A RESTAURANT'.
3. Press PHRASE SEARCH (CLEAR) key again to clear screen, type in the word, e.g. 'sympathy', press "ENTER", displays shows searching symbol, and goes to a sub-category 'EXPRESSING SYMPATHY'.

 21.

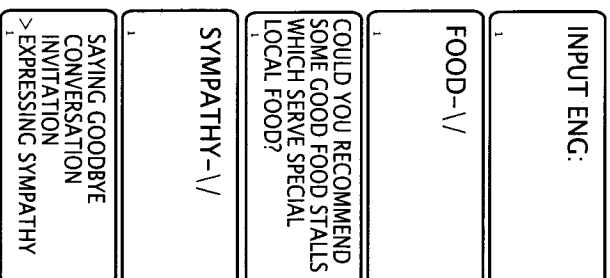


Press "European" () once, display shows:

 Press "European" () twice, display shows:

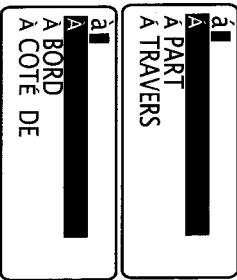

12. Chinese input method:

There are 2 input methods in Chinese. First is the Pinyin, another is the WuPe. Press () Chinese input key to select your input method. For example you selected Pinyin input method, e.g. type 'ai', it will display all the characters with phonetic of 'ai', you select one and press the number of it's position to take this character.

13. Japanese input method:

There are 2 input methods in Japanese. First is the Hiragana, another is the Roman. Press () Japanese input key to select your input method. For example you selected Roman input method, e.g. type 'AKAI', it will turn to Japanese display, press 'ENTER', it displays 'Red' in English translation.

14. Korean input method: A Korean character is group with several parts. The translator keyboard is same as the Korean PC keyboard. E.G. in English keyboard:

1. Press R, Press K, Press Enter
2. Press W, Press K, Press D, Press Enter
3. Press ENTER
4. You can find the English translation of 'MOST' on screen.

Phrases translation - There are 2300 phrases divided into 16 main categories and 147 sub-categories.

16 Categories and the sub-categories:

1. COMMUNICATION - Phrases, Thanks, Apology, Asking Again, Basic Question, Saying Hello, Saying Goodbye, Conversation, Invitation, Expressing Sympathy, Emotion, Quarel, Congratulations, Phrases of Love.
- 18.

2. ACCOMMODATION - Looking for a Hotel, Reservation, Checking in, Front Desk, Room Service, Laundry, Operator, Problem, Business Centre, Checking Out.

3. MEALS - Looking for a Restaurant, Reservation, Order, Waiter's Service, Payment,

- Chinese Food - Beijing Cuisine, Chinese Food - Shanghai Cuisine, Chinese Food - Szachung Cuisine, Chinese Food - Cantonese Cuisine, Japanese Food, Thai Food, Vietnamese Food, Korean Food, Indian Food, French Food, Italian Food, Mexican Food, Western Food, Chinese Dessert, Western Dessert, Chinese Snack, Western Snack.

4. SIGHTSEEING - Leaving a Country, In the plane, Entering a Country, Tourist Information, Sightseeing/Tours, Exchanging Money, Photography.

5. TRANSPORTATION - Airplane, Ship, Train, Under-ground Railway, Taxi, Bus, Car, Map.

6. ENTERTAINMENT - Recreation, Bar, Night Club, Karaoke, Disco, Sauna Bath, Casino,

7. SHOPPING - Looking for a Store, Purchasing, Bargaining, Paying, Clothes/Tailor.

8. EMERGENCY - Asking for Help, Lost/Theft, Sudden illness/Injury, Symptoms/Diseases, Hospital, Pharmacy

9. TELECOM/MAIL - Mailing, Telephone, Telegram/Fax/Page

10. BUSINESS CONVERSATION - Meeting, Payment Terms, Letter of Credit (L/C), Shipment Documents, General Term of Trade, Interview.

11. BASIC - Numbers, Time, Date/Week/Months, Colors, Figure, Position, Unit.

12. GENERAL KNOWLEDGE - Weather/Geography, Country, City, Vacation Places, Animal, plant, Insect.

13. LIVING - Housing, Electrical Appliances, Furniture, Sleeping Set, Clothing, Shoes/Hosiery/Headgears, Size/Materials, Toliery, Cosmetic, Skin Care, Jewelry & Accessories, Souvenirs, Office

Appliance, Tele-communication Products, Tools.

14. FOOD - Beverages, Meat, Vegetable, Sea Food, Daily Food, Bar Snack, Fruit, Meals, taste, Cooking, Condiments, Wine, Dinner Set.

15. HUMAN BEING - Family, Education, Occupation, Marriage, Race, Religious, Society, Festival, Zodiac, Music/Musical Instruments, Chinese Year/Birth of 12 Animals.

16. SPORT - Ball Games, Water Sport, General Sport, Terms of Games, Swimming, Golf.

LingoTM Universal Communication

Distributed by Lingo Corporation, New York, Hong Kong.
Major components manufactured in Japan. Assembled in China.
Lingo *Pacific Talk* is a registered trademark of Lingo Corporation.
