

Partner[®] EGR430T
English-German-Russian
Talking Electronic Dictionary
&
Organizer

Ectaco, Inc. assumes no responsibility for any damage or loss resulting from the use of this manual.

Ectaco, Inc. assumes no responsibility for any loss or claims by third parties which may arise through the use of this product.

Ectaco, Inc. assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, repairs, or battery replacement. Be sure to back up all important data on other media to protect against its loss.

The contents of this manual are subject to change without notice.

No part of this manual shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without permission from Ectaco, Inc.

Partner® is the registered trademark of Ectaco, Inc., NY, USA

© 1992–2002 Ectaco, Inc., New York, USA.

All rights reserved.

CONTENTS

INTRODUCTION	4
General View	5
Power Supply	5
Initialization.....	6
Keyboard	7
Display.....	9
Main Menu.....	9
DICTIONARY	10
USER'S DICTIONARY	12
GRAMMAR	14
PHRASEBOOK.....	14
IRREGULAR VERBS.....	14
POPULAR IDIOMS	15
PHONES.....	15
SCHEDULE	16
CALCULATOR.....	18
METRIC CONVERSION.....	18
CURRENCY CONVERSION	18
HANGMAN WORD GAME	19
WORLD TIME	19
LOCAL TIME.....	20
PC-LINK.....	20
SETUP	22
Interface language	22
Dictionary modes	22
Slang lock.....	22
Advanced search	22
Russian keyboard mode	22
Key tone	23
Real time clock.....	23
Date format.....	23

Time format	23
Schedule alarm	24
Daily alarm	24
Memory check	24
Data deletion	24
Set password.....	24
Security mode	25
Set contrast	26
Speech options.....	26
Set sleep time.....	26

INTRODUCTION


Congratulations on purchasing the Partner® EGR430T! This product is the result of the combined efforts of Ectaco's linguists, engineers, and programmers, and represents the last generation of the highest-performance integrated educational tools available. The Partner® EGR430T features:

- ❖ *Main vocabulary (English-German, English-Russian, Russian-German bidirectional dictionaries) of approx. 650,000 words, including medical, technical, legal, and business terms, as well as slang, idioms, and general expressions*
- ❖ *Electronic English Grammar book*
- ❖ *A selection of the most popular American and German idioms*
- ❖ *English and German irregular verbs*
- ❖ *12-topic book of common English phrases*
- ❖ *Advanced English, German and Russian speech reproduction*
- ❖ *Recording function for new words*
- ❖ *Instant reverse translation*
- ❖ *Award-winning Vector Ultima™ trilingual spell-checking system*
- ❖ *128Kb English/German/Russian personal organizer for scheduling and telephone numbers, equipped with search function*
- ❖ *Local and World time*
- ❖ *High-speed data exchange with a PC*
- ❖ *Trilingual interface*

- ❖ *Data protection system*
- ❖ *Slang lock function*
- ❖ *External power jack for AC operation*
- ✓ As continuous efforts are made by the manufacturer to ensure the best quality and performance of the Partner® products, some characteristics of the device you have purchased may slightly differ from their description in this manual.

General View

The general view and external features of the EGR430T are shown below.

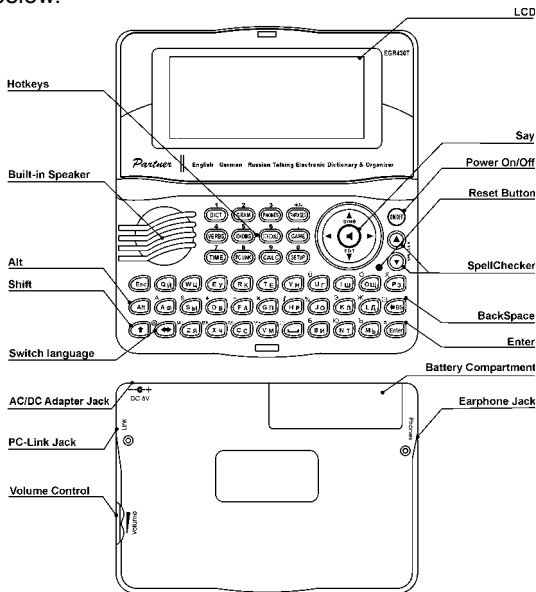

Power Supply

The EGR430T is powered by two AAA (LR03) batteries. When the batteries become weak, a warning message will be displayed.

In order to prevent excessively discharging the batteries and undergoing a resulting loss of data in RAM, the Say function and communication channels will be disabled if battery power is low.

To restore full functionality of the device and to avoid risk of losing user data, replace the complete set of batteries as soon as possible. Do not mix old and new batteries.

How to replace the batteries

- Ensure the power is off. Press ON/OFF to turn the device off.
- ✓ Never try to remove batteries from the device when the power is on. This can seriously damage the device. If you experience difficulty turning the device off, press the RESET button on the right-hand side of the keyboard (over the O button) and reset the system.
- Remove the battery compartment cover by sliding it away from the device.
- Remove the used batteries and replace them with new ones.
- ✓ When replacing the batteries, you have 2 minutes to place new ones in the device without risk of losing any data stored in RAM. **Do not exceed the 2-minute limit!** Neither the manufacturer nor the dealer may be held responsible for loss of user data.
- Make sure to place the batteries according to the polarity marks (+ -) inside the compartment.
- Replace the battery compartment cover by sliding it toward the device. Make sure the cover sits in place properly.
- ✓ The EGR430T is equipped with a jack for external power supply.
- ✓ **Use of an inappropriate external power supply may cause failure of the device and may void the warranty.** The AC/DC adapter should provide 6V and min 300mA DC current.
- ✓ Communication with a PC consumes a considerable amount of energy. Always try to use an external power supply during these operations.

Initialization

The initialization routine is started

- when EGR430T is turned on for the first time;
- when you remove the batteries (e.g. during replacement);
- after the system has been reset with the RESET button.
- ✓ The RESET button is located on the right-hand side of the keyboard (over the O button). It can be accessed with any thin

object like a paper clip. Never use a needle or pin for this purpose since it can damage the device.

- If you see *Initialize system?(y/n)*, press the N button to abort initialization and customization.

The *System is initialized!* message indicates that system initialization has been completed and the factory defined default settings have been restored.

- Then you will see the *Delete all data?* message. Press the N button to save your data.

Keyboard

The standard American QWERTY keyboard is combined with German and Russian standard layouts.

To enter additional signs in German or Russian (marked with blue at upper left of buttons), press ALT+ the desired button.¹

To enter such signs in caps, press SHIFT+ ALT+ the desired button.

EGR430T has standard and phonetic modes of entering Russian letters:

Russian standard mode allows you to enter Russian letters corresponding to the keyboard marks.

Russian phonetic mode allows you to enter Russian letters by their phonetic consonance with English letters, e.g. you can press the F button to enter the Russian letter “Ф”.

The table below shows the Russian and English layouts in the Russian phonetic mode.²

q	w	e	r	t	y	u	l	o	p
я	ш/щ	е/э	р	т	ы	у/ю	и	о	п
a	s	d	f	g	h	j	k	l	
а	С	д	ф	г/ж	х	й	к	л	
	z	x	c	v		b	n	m	
	з	ь/ъ	ц/ч	в		б	н	м	

¹ Key1+Key2 here and further on signifies the combination of keys to use - first press and release Key1, then press and release Key2.

² Press ALT to enter letters shown after the slash (/) in the table.

- ✓ Unlike PC keyboards, there is no need to keep a key (such as SHIFT) down while pressing another one. It is enough to press it only once and release.

The available set of national characters is dependent on which language input mode is selected. Language modes can be toggled by pressing the ⇄ button. ENG or GER (if the 3-language mode is set, see Page 22) or RUS, or NUM (if the numerical mode is available) is displayed in the upper right corner respectively.

Function shortcut keys

ON/OFF	Turn the device On or Off
RESET	Re-initialize system
SPELLER (SHIFT+ ▼ or ▲)	Launch spell-checker

Other shortcut keys open sections corresponding to the marks on the buttons.

Control and edit keys

←, →	Move cursor / highlight / switch main menu
↓, ↑	Highlight / scroll lines / switch main menu / change values
▼, ▲	Scroll pages
ENTER	Execute
SPACE	Enter space
ESC	Close active window / cancel / return to the previous page
ALT	Enter symbols from the two-letter keys ³
SHIFT	Type in uppercase
←BS	Delete character to the left of the cursor
⇄	Switch language or translation direction
SHIFT+↑	Open additional symbols ⁴
SHIFT+↓	Open record to edit
SHIFT+BS	Delete record

³ Press ALT+ corresponding button to enter lowercase German or Russian letters, marked with blue at the upper left of the buttons. To obtain the uppercase of these letters, press SHIFT+ALT+ corresponding button.






⁴ Press ▼, ▲ to move between the three lines of symbols. Press the corresponding number button to enter the desired symbol.

SAY	Pronounce the main word or phrase
SHIFT+SAY	Pronounce a translation
A, P	Specify AM or PM (when the 12-hour format is set)

Display

Partner® EGR430T features a high-resolution screen (160x64 pixels).

The indicator line is at the top of the display and shows the following indicators:










EDIT	Current Record opened in the edit mode
SHIFT	SHIFT key pressed
	Batteries low
	Device locked
	Alarm on
	Vertical scrolling or paging enabled (more text available)
	Horizontal scrolling enabled

Main Menu

The EGR430T MAIN MENU consists of 16 functional icons, which visually organize access to the dictionary's sections.

- To display the MAIN MENU, turn the device on, or close a current section.
- Move between icons using ↓, ↑ or ←, →.
- To open a section, whose icon is highlighted, press ENTER.

The icons shown in the MAIN MENU represent the following sections:

	Dictionary		Calculator
	User's Dictionary		Metric Conversion
	Grammar		Currency Conversion
	Phrasebook		Hangman Word Game
	Irregular Verbs		World Time
	Popular Idioms		Local Time



Phones



PC-Link



Schedule



Setup

DICTIONARY

The *Dictionary* section includes English-German, English-Russian, and Russian-German bidirectional dictionaries containing over 200,000 words each.

- Enter the *Dictionary* section.
- ✓ Following system initialization, the English-Russian dictionary is selected by default.

Viewing entries

- To view a translation of a word, enter it from the keyboard.

```

English=>Russian
dictio|
  

DICTION
  
```

- While you are typing, the headword closest in spelling to the portion you have entered so far will be displayed under the input line. When the desired word is displayed, press ENTER to see its translation(s).
- ✓ You can speed up your *Dictionary* work by turning the *Advanced Search* mode OFF (see Page 22).

```

DICTIONARY
['dɪkʃənəri]
[N]
СЛОВАРЬ [М],
СПРАВОЧНИК,
  
```

Use:

- ↓, ↑ to scroll through the translations
 - ▲, ▼ to switch between adjacent entries
 - Press ESC or any letter button to return to the input line and translate another word in the same dictionary.
- You can change the translation direction by pressing ⇄.

- If the 3-language mode is set (see Page 22), press the DICT hotkey to switch between English, German and Russian dictionaries.

Parts of Speech and Gender Labels

Translations of a headword are listed in the alphabetical order by part of speech.

A – adjective	ID – idiom	PHR – phrase
ABBR – abbreviation	INTRJ – interjection	PREF – prefix
ADV – adverb	N – noun	PREP – preposition
ART – article	NPR – proper noun	PRON – pronoun
AUX – auxiliary	NUM – numeral	SUFF - suffix
CONJ – conjunction	PART- particle	V – verb

German and Russian nouns are marked with gender and number labels.

F – feminine	MF – masculine or feminine	MPL – masculine plural
FN – feminine or neuter	MFPL – masculine or feminine plural	N – neuter
FPL – feminine plural	MN – masculine or neuter	NPL – neuter plural
M – masculine		PL – plural

Instant Reverse Translation

For your convenience, EGR430T provides an *Instant Reverse Translation* for all words and expressions in the *Dictionary*.

- Press ←, → to select a word or expression for reverse translation.

<p>TRANSLATION [trænz'leɪʃən, træns'leɪʃən] [N] ПЕРЕВОД [M],</p>

- Press ENTER to obtain its instant reverse translation. You can make up to four reverse translations in succession (without closing windows). The message *Last translation* is displayed if the limit is reached.

Use:

- ESC to close the *Reverse translation* windows⁵
- DICT or any letter button to return to the input line

Spell-checker Vector Ultima™

When you are unsure of the spelling of a word, the multilingual spell-checker Vector Ultima™ will help you.

- Type the word as you hear it. For example, “fol” for “fall”.
 - Press SHIFT+SPELLER on the keyboard (SHIFT and either of the ▲, ▼ buttons). A list of suggested *Variants* appears on the screen.
 - Select the desired word and press ENTER.
- ✓ If the spell-checker is unable to suggest alternative words, the *No variants* message is shown.

Pronunciation of words and sentences

The Text-To-Speech technology provides pronunciation of any English, German and Russian words and phrases.

- Display an entry.

Use:

- SAY to listen to the pronunciation of the headword
 - SHIFT+SAY to listen to the pronunciation of all translations
- You also can listen to any selected words or phrases listed in the entry. Simply make the selection by using ←, → and press SAY.
- ✓ The device is able to generate pronunciation of any text, not limited to dictionary entries. Simply type a word or phrase in the input line of the corresponding *Dictionary* and press SAY to listen to its pronunciation.

USER'S DICTIONARY

EGR430T allows you to create your own vocabulary.

- Enter the *User's Dictionary* section and choose one of the user's dictionaries – English, Russian or German (if the 3-language mode is set).

⁵ The windows will be closed in the reverse order.

Record

The record consists of a word or expression, its translation, and its part of speech. It also has information about the index number of the current record and the total number of records.

```
penny
[N]
пенс
3/4
```

Creating a Record

- When in a record list, press ENTER to open a new record template.
- ✓ If the dictionary is empty, a new record template will be opened automatically.
- Type in a word or expression. Press ENTER.

```
English word:      ENG
penny
```

- Type in a translation(s). Use ⇔ to set the target language.

```
Russian word:     RUS
пенс
```

- Press ENTER again.
- Choose an appropriate abbreviation of the part of speech by scrolling by using ↓, ↑. Press ENTER.

```
Part of speech:
ABBR
ART
N
PRON
```

The record will be saved and you will be returned to the records list.

GRAMMAR

The EGR430T contains the *English Grammar for non-English Speakers*.

✓ *Grammar* is available in Russian only.

- Enter the *Grammar* section.

The *Grammar* contains three-level hierarchical menus. You can reach a menu's third level by consecutively selecting topics from the menu.

PHRASEBOOK

The phrasebook contains over 1,100 English phrases and their translations, divided into 12 conversational topics:

Everyday conversation	Shopping	Transport
Traveling	Sightseeing	Health
Hotel	Communication	Beauty care
In the restaurant	At the bank	Calling for police

Most of the topics contain a number of several subtopics.

- Enter the *Phrasebook* section.

Phrasebook
Everyday conversation
Traveling
Hotel
In the restaurant

- Select a topic. Press ENTER to see its subtopics.

IRREGULAR VERBS

All commonly used English and German irregular verbs are stored in alphabetical order in the *Irregular Verbs* section.

- Enter the *Irregular Verbs* section. Select English or German subsection (if the 3-language mode is set).
- Type the first letter of the desired verb and scroll through the list to find it.

take; took; taken

братъ

- Use ⇔ to switch between English, Russian and German translations.

POPULAR IDIOMS

Over 200 widely used American and German idioms and their equivalents or translations are included in the *Popular Idioms* section.

- Enter the *Popular Idioms* section. Select English or German subsection (if the 3-language mode is set).
- Type the first letter of the desired idiom and scroll through the list to find it.

take advantage of

ИСПОЛЬЗОВАТЬ С ВЫГОДОЙ

- Use ⇔ to switch between English, Russian and German (if the 3-language mode is set) translations

PHONES

In this section you can store names, telephone and fax numbers, as well as postal and e-mail addresses in English, German and Russian.

- Enter the *Phones* section. You will see a list of existing telephone records sorted by name.

Name:

Smith John

Phone:

5432136

44

Creating a Record

- To open a new record template, press ENTER when you are in the record list. If there are no records stored, a new record template will be opened automatically when you enter the list.
- Start filling out the *Name* page.
- To open the next page, press ENTER.
- ✓ It is necessary to complete the *Name* page to continue to the subsequent pages.

Finding a Record

There are two ways to find a record:

I. You may start typing a name included in a stored record.

Use:

- BS to delete the inputted word
- ⇄ to switch between English, Russian, German and numerical input modes

II. The records are sorted alphabetically by name. You can scroll the record list using ▼ or ▲.

SCHEDULE

You may effectively manage your time by using the *Schedule* section.

- Enter the *Schedule* section. The list of existing records will be opened.

Records are sorted by date and time.

Date: 05/01/2002
Time: 02:36 PM ↻15 min.
Content:
Meeting
22

Creating a Record

- To open a new record template, press ENTER when you are in the record list. If there are no records stored, a new record template will be opened automatically when you enter the record list.

Date: 04/01/2002
Time: 02:38 PM
Reminder: 00 min.

The first page of a record includes information on *Date*, *Time* and the audible *Reminder*. The second page - *Content* - includes information about the event.

Date and *Time* specify the moment of the *Schedule alarm* operation.

The *Reminder* specifies the time period until a *Schedule alarm* will be issued.

- Set the date and time and specify the time period until a *Schedule alarm* will be issued.
- Press ENTER to open the *Content* page.
- Press ENTER to save a record.
- ✓ The *Schedule* memory is limited to 50 records. The *Not enough memory* message is displayed when the record list is full.

Finding a Record

The records are sorted by date and time. Use ▼, ▲ to scroll the record list.

Reminder and Schedule alarm

If enabled, the *Reminder* sounds at the determined time until a *Schedule alarm* will be issued, producing an audible beep. The *Reminder* is turned OFF by default for a new record. The *Reminder* time is adjusted separately for every individual record.

- ✓ *Reminders* and *Schedule alarms* sound even if the device is OFF.
- ✓ If a *Reminder* and a *Daily alarm* have the same date and time, only the *Reminder* will be displayed since it has higher priority.
- Press any key to interrupt a *Schedule alarm* or a *Reminder* beep. The corresponding *Schedule* record will be displayed in the view mode at this time.

You can change the record and set the *Reminder* for a later time. Closing the *Schedule* reminder window will bring you back to the section (for example, *Dictionary*) as you were before the alarm went off.

CALCULATOR

- Enter the *Calculator* section.

When entering numbers and operations from the keyboard, there is no need to press the SHIFT key while in *Calculator* mode. Use this application as an ordinary pocket calculator.

METRIC CONVERSION

With your EGR430T you may easily convert measurements from the British-American system into the metric system commonly used in Europe and vice versa, as well as convert within each system.

- Enter the *Metric Conversion* section.
- Choose a subsection by pressing ↓, ↑. Press ENTER.
- Input the value
- ✓ There may be more than four units of measure in the subsection.

CURRENCY CONVERSION

The *Currency Conversion* function allows you to instantly calculate conversion values between nine pre-installed currencies and three user-defined currencies.

- Enter the *Currency Conversion* section.
Setting and Checking Rates
- Select the *Set rate* subsection to specify currency names and rates.
- Select a currency. Press ENTER.
- ✓ You can specify or change the names of any of the currencies listed. New currencies may be added in place of ???.
- Change/specify the currency name. Press ENTER to open the next window.
- Specify an exchange rate relative to the basic currency (whose rate should equal 1).
- ✓ The default exchange rate for all currencies is 1.
- Press ENTER to save changes.

Conversion

- Enter the *Calculation* subsection.
 - Select a currency name and enter an amount.
- After you have typed a new amount in one of the lines, the conversion will be performed.

HANGMAN WORD GAME

The EGR430T features the learning game *Hangman*, which can improve your spelling skills and enhance your personal vocabulary.

- Enter the *Hangman* section. Select a language for the game (if the 3-language mode is set). Press ENTER.
- Choose the target language by pressing ⇄. Once the language is chosen, a new game will begin.
- Try to guess letters in the word by entering them with the keyboard.

If you guess a letter correctly, it will appear in place of an asterisk in the word. The number displayed shows the number of tries remaining.

- When playing, press ENTER to display the translation of the hidden word (which will count as one try). To hide the translation, press ESC.
- Press SAY to hear the hidden word (counts as one try).
- After the game ends, the hidden word and its translation(s) will be shown.
- Press ESC to return to a new game.

WORLD TIME

Using the *World Time* section, you may view the current time in cities around the globe.

- Enter the *World Time* section.

<p style="text-align: center;">World time</p> Moscow Russia Tue, 30 April, 2002 21:18:27
--

The *World Time* screen shows the names of the selected city and country (default: Moscow, Russia), the date, day of the week, and the current time for that city.

- To see information for another city, scroll through the alphabetic list by using ↓, ↑.
- To see information for another city of the same country, scroll through the alphabetic list by pressing ▼, ▲.
- Also, you can quickly find a desired city by pressing the first letter of its name and scrolling through the list by using ↓, ↑.
- When you find a desired city, press ENTER to save changes. The next time you enter this section the city you have chosen will be displayed first.

LOCAL TIME


- Enter the *Local Time* section.

The *Local Time* screen shows the names of the selected city and country (default: New York, USA), the date, day of the week, and the current time for that city. You may specify these settings in the *Setup* section.

PC-LINK

Using the EGR430T PC-Link cable (available separately as part of the Communication Package) and the PC-Link software (included on a CD-ROM in the standard package) you may exchange data between your EGR430T and a personal computer. This feature will allow you to keep a backup copy of the *Telephones*, *Schedule*, and *User's Dictionaries* data on your PC.


Software

- Insert the supplied CD into the CD-ROM drive of a PC. If the installation program does not start automatically, run the INSTALL.exe file from the CD root catalog.
- Choose *EGR430T PC-Link* from the menu displayed on the PC.
- After the program is installed, start it from Start/Programs/Ectaco. The  icon will appear in the System Tray.

- ✓ The latest version of the PC-Link software and additional dictionaries can be downloaded from Ectaco's web site at www.ectaco.com

Sending and Receiving

- Connect the PC-Link cable to the *Link jack* located on the right-hand edge of the device.
- Enter the *PC-Link* section.
- Right click the PC-Link icon in the System Tray. In the PC-Link program, select an appropriate data transfer mode.
- ✓ Make sure to select an appropriate COM port.
- ✓ Make sure you have no other PC-Link program running simultaneously with EGR430T PC-Link.
- Select the *Send data* transfer mode. Press ENTER.
- Choose the section(s) you wish to send. Use SPACE to check or uncheck a section.

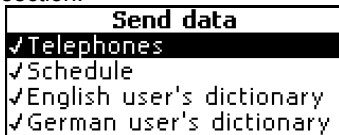

- Press ENTER to start the transfer.
- ✓ Start the data transfer first on the receiving device, then on the sending device.
- To receive data, select the *Receive data* transfer mode. Press ENTER and the transfer will begin.
- ✓ The time span between the data transfer startup on the PC and the device must not exceed 30 sec.
- ✓ Note that in the *Receive data* mode, the newly transferred data will replace all the old information saved in the corresponding sections of your device.
- ✓ Always back up your important data! Neither the manufacturer nor the dealers assume any responsibility for lost or corrupted data.
- ✓ Data transfer consumes a considerable amount of energy. Using an external power supply is strongly advised.

SETUP

Personalize your EGR430T and ensure good maintenance of your personal records by selecting options in the *Setup* section.

- Enter the *Setup* section.

Most of the *Setup* section options are very easy to adjust. Unless stated otherwise, enter a subsection and select the desired option with ↓,↑. Then press ENTER to confirm your choice.

Interface language

The default interface language of the EGR430T is English.

- ✓ German is only available when the 3-language mode is selected in the *Dictionary modes* subsection.

Dictionary modes

EGR430T can work in two modes: *2-language* (set by default) – English and Russian interfaces, dictionaries, input modes etc. are available; and *3-language* – English, Russian and German ones are available.

Slang lock

In this subsection you can hide slang words or phrases containing in the dictionaries. For example, you may forbid your children access to slang.

To set Slang lock OFF, enter the *showslan* password and press ENTER.

Advanced search

You can speed up your *Dictionary* work by choosing to turn the *Advanced search* mode OFF. By default, *Advanced search* is turned ON.

Russian keyboard mode

In this subsection you can choose one of the available Russian keyboard modes: *standard* or *phonetic*.

- ✓ *Russian standard mode* allows you to enter Russian letters in accordance of the keyboard marks. *Russian phonetic mode* allows you to enter Russian letters by their phonetic consonance with English letters, e.g. you can press the F button to enter the Russian letter “Ф”.

Key tone

This feature is designed to produce a short beep every time you press a key on the device's keyboard. The key tone is enabled by the system's default.

Real time clock

In this subsection you can choose the city to display in the *Local time* section and adjust the current time.

- ✓ January, 01, 2002, 00:00 (12:00 AM), and New York, USA are the default values.
- Enter the *Real time clock* subsection.

```
Set local time
MM/DD/YY = 04/02/2002
11:37 AM
```

- Specify the current date and time.
- Press ENTER to save changes. The next section displayed will allow you to select the local city.

```
New York
USA
-05:00 (GMT)
```

This display shows the city and country names and the city's GMT offset.

Refer to Page 20 to learn how to find the desired country or city in the list.

- When you find the desired city, press ENTER to save the changes.

Date format

The default Day-Month-Year date format can be changed to Month-Day-Year.

Time format

The default 24-hour (Military) time format can be changed to the American 12-hour format.

Schedule alarm

In this subsection you can turn the *Schedule alarm* ON or OFF. If turned on, which is the default setting, the *Schedule alarm* will go off at the date and time of the *Schedule* record, producing an audible beep.

Daily alarm

- Enter the *Daily alarm* subsection.
- ✓ The default values are midnight, 12:00, and OFF.

Use ∇ , \blacktriangle to turn the alarm ON/OFF

- Press ENTER to save changes.

If turned on, the *Daily alarm* produces a signal at the set time.

- Press any key to interrupt the *Daily alarm* beep (otherwise, the beep will continue for 30 seconds).

Memory check

Instantly check the free memory status with this *Setup* option.

- Enter the *Memory check* subsection to check the remaining free memory.

Data deletion

The *Data deletion* subsection gives you the ability to free up memory resources by deleting records much faster than removing them one by one.

Set password

With no password set (default) all functions of the EGR430T are freely accessible. After a password has been set, the following sections may be locked against unauthorized access:

<i>Telephones</i>	<i>User's</i>	<i>Security mode</i>
<i>Schedule</i>	<i>dictionaries</i>	
<i>PC</i>	<i>Data deletion</i>	
<i>Communication</i>	<i>Set password</i>	

To gain access to any of these sections in the locked mode, a valid password must be provided.

- Enter the *Set password* subsection.

Input password:
[]

- Specify a password up to 8 characters in length. Press ENTER.
- Retype the password for confirmation. Press ENTER.
- ✓ Always remember your password. If you forget it, you will have to reset the system, which will cause irrevocable loss of user data.

Changing the password

- Enter *Set password*. Input the current password. Press ENTER.
- Specify a new password. Press ENTER.
- Retype the password for confirmation. Press ENTER to save the password.


Clearing the password

- Enter the *Set password* subsection. Input current password. Press ENTER.
- Don't input any characters into next two fields, just press ENTER twice.

Security mode

With the help of the *Security mode* subsection you can protect your personal records and lock up the *PC communication* function.

- Enter the *Security mode* subsection. Press ENTER.

When the *ON* option is selected, data access is locked and the  indicator is shown on the indicator line.

- ✓ It is recommended to close a password-protected section before you turn the device off.

The *Security mode* may be canceled by entering a valid password at the prompt when:

- the OFF option in the *Security mode* subsection is selected
- any protected section is opened

Set contrast

The default contrast setting can be changed in the *Set contrast* subsection.

- Change the contrast level using ←, →.

Speech options

Suit your own pronunciation by adjusting the speed and frequency of the built-in speech synthesizer.

Use ENTER to move between *Speed* and *Frequency* bars and ←, → to adjust the levels of each option.

Set sleep time

The automatic power off has a preset delay of 3 minutes. This feature saves battery life by shutting down the device after a specified period of inactivity. The adjustable range is from 1 to 5 minutes.